

HOW TO PLAYAWAY - BUTTON FUNCTIONALITY

1 EQ/Equalizer:

Each press on the EQ button rotates to a new EQ mode.

NONE :: No EQ setting

LOUD :: Overall sound is boosted

LOW :: Bass is boosted

HIGH :: Treble is boosted

CLEAR :: High end sound is amplified

HIFI :: Sound is mixed for best performance

2 Power:

- Press the POWER button once to turn unit on
- Press the POWER button again and hold for 3 seconds to power off - release button after unit counts down and "OFF" appears on the LCD screen

3 Speed (Audiobook Content):

- Each press of the SP button rotates to a new speed mode.

Shuffle Play (Music Content):

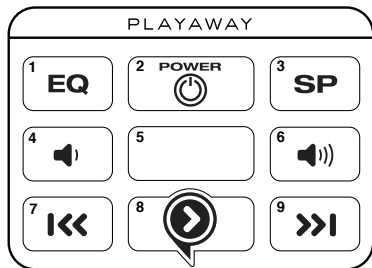
- If your Playaway is pre-loaded with music content, the SP button enables/disables shuffle play functionality
- Pressing the SP button once will enable Shuffle Play mode and cause a randomization of playback

4 Volume Down:

- Each press of the Volume Down button will decrease the volume one level
- Press and HOLD Volume Down to accelerate volume decrease

5 LCD Screen:

- Displays the operating status of the Playaway
- Battery level indicated by icon
 - :: Full battery
 - :: Replace battery

**6 Volume Up:**

- Each press of the Volume Up button will increase the volume one level.
- Press and HOLD Volume Up to accelerate volume increase

7 Reverse:

- Press the Reverse button once to reverse one chapter/track ("track" refers to music content)
- Press and hold the Reverse button to fast rewind

8 Play/Pause:

- Press the button once to Play
- When in play mode, press the button again to Pause playing or resume Play

9 Forward:

- Press the Forward button once to advance one chapter/track ("track" refers to music content)
- Press and hold the Forward button to fast forward

CONSUMER INFORMATION

Need assistance or additional info?

Visit us online at www.playaway.com.

Or call us at (877) 893-0808.

➤ Please keep this card for reference